INSTALLATION INSTRUCTIONS V90200

ACT954 ACCURUS
REMODEL HOUSING

Avoid Fire or Electric Shock

This product MUST be installed in accordance with the applicable installation code by a person familiar with the construction and operation of the product and the hazards involved.
DO NOT install insulation within 3 inches of any part of the luminaire. Blinking light of this thermally-protected luminaire may indicate overheating.

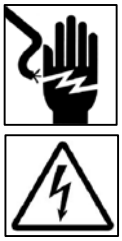

*Read Installation Instructions completely before installation.
*Failure to follow Installation Instructions may void warranties.
*Always turn off electricity at fuse box before proceeding to prevent electrical shock.

Installation

1. Cut an opening of 4-3/16 inch diameter in ceiling.
2. Get wire from ceiling.
3. Mark electrical connections:
   a. connect 1/2 inch trade size flexible metal conduit (supply wire) to junction box opening near can (housing) with suitable housing.
   b. connect black wire from transformer to black supply wire from conduit with wire connector provided inside the junction box.
   c. connect red or white wire from transformer to white supply wire from conduit with wire connector.
   d. connect green grounding wire (or bare copper wire) in junction box to grounding wire from conduit (green wire) with wire connector.
4. Install housing above ceiling:
   a. adjust suitable height of the weight supporter on transformer.
   b. turn and insert junction box through the opening.
   c. snap the housing can straight up against opening.
   d. push clip through housing slot and lock in place; fit clip on side of transformer first to assure proper holding on the weight.
5. Install lamp into lampholder.

IMPORTANT : For Trim ACT2385 Use Only 50W AR70 12V Lamp.
: For All Other Accurus Trims Use 50W Max MR16 12V Lamp Only.

6. Install lamp into trim then trim into housing.

RSA Cooper Lighting 7945 Orion Avenue, Van Nuys, CA 91406 818-349-3030/ 800-356-3030 FAX 818-349-3031